

4090KIT

VISU-LOK PISTOL MASTER TORQUE DRIVER



INSTRUCTIONS

1. Determine the type (Flush, Protruding, Millable) and size of the fastener being used.

2. Use the right Adapter Assy.



Example:

fastener: Type Flush size 3/16" (- 6) use:
Adapter Assy: TD200



3. Insert Driver Assy into slot on Torque Driver Assy (MTD302) screw on Hood Reducer and screw on Nose piece.

4. For size 12, remove torque driver assy., (MTD302) and Hood Reducer, (PT3021R), insert Adapter Assy., (PT375 or PT375P) into Clutch Driver, (PT3022) and Nose piece into Hood, (S1375-20).

Fastener Driver	Dia.
- 5	5/32
- 6	3/16
- 8	1/4
- 10	5/16
- 12	3/8

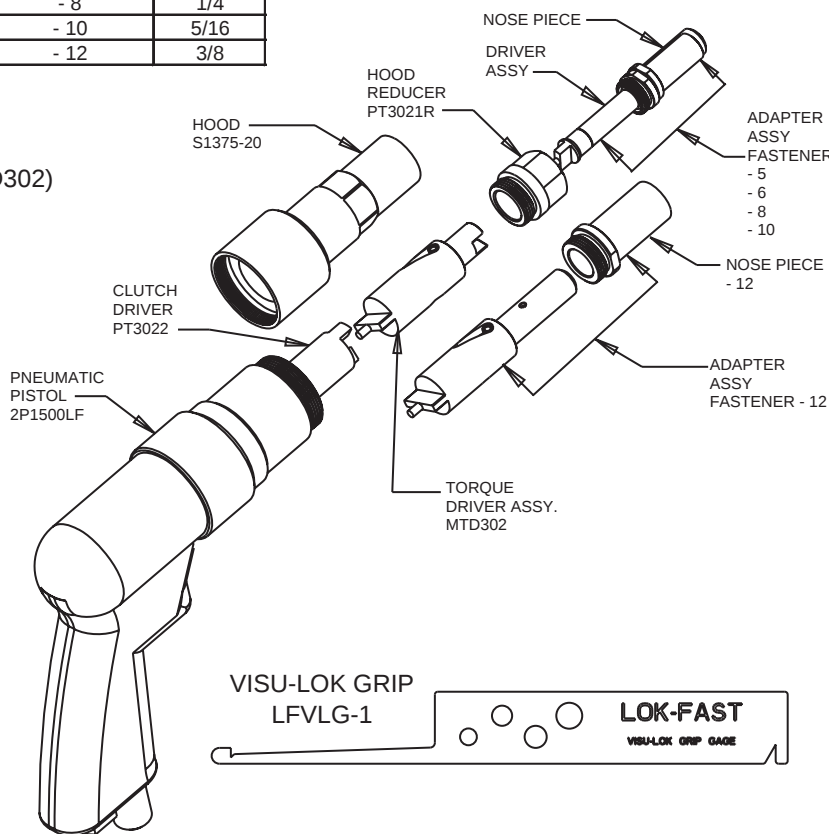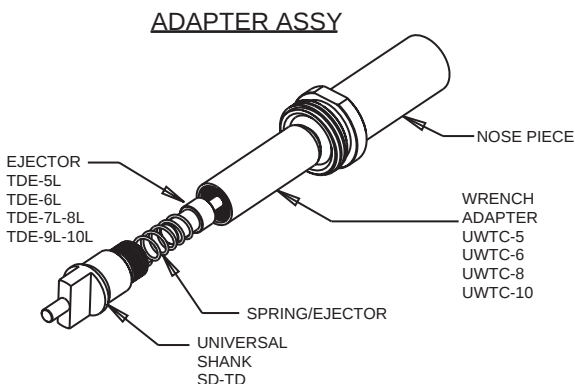

ADAPTER ASSEMBLIES & NOSE PIECES

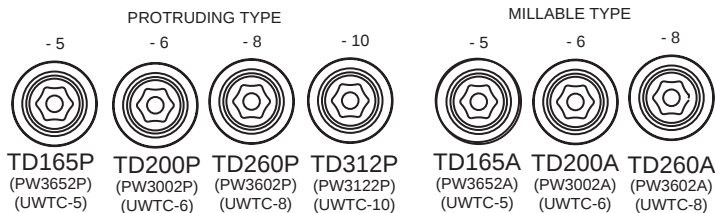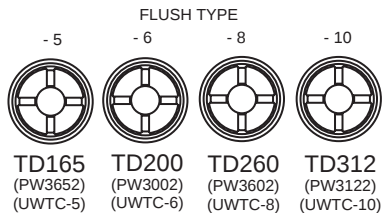

ADAPTER ASSY (-12 FASTENERS ONLY) PT375 PT375P

