

4070KIT

VISU-LOK RIGHT ANGLE TORQUE RESPONSIVE KIT



INSTRUCTIONS

1. Determine the type (Flush, Protruding, Millable, Reduced Flush) and size of the fastener being used.

2. Use the right combination of Nose and Master Torque Driver.


Example:

fastener: Type Flush size 3/16" (- 6) use:

Nose: PT4002

Master Torque Driver Assy: PT4001


3. Insert Master Torque Driver Assy into hood and screw on Nose.

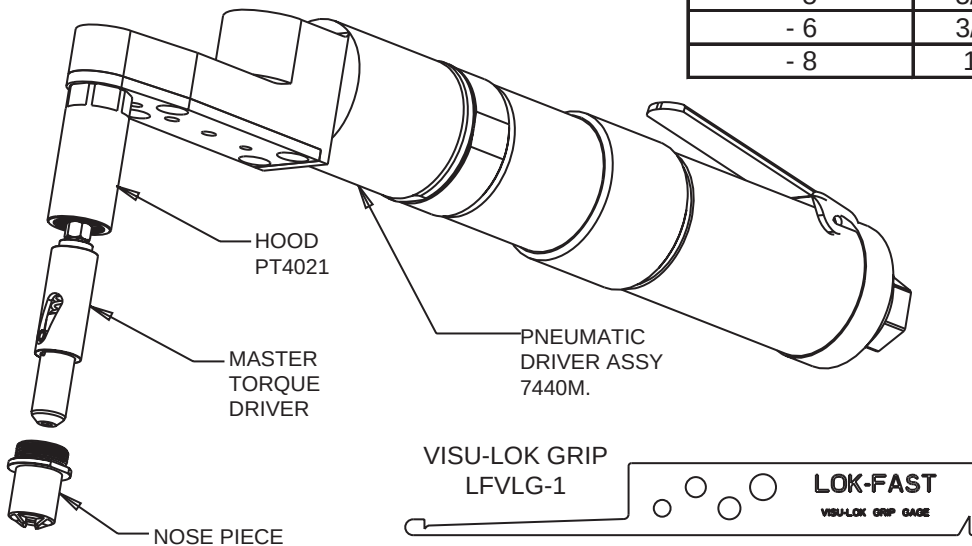


Fastener Driver	Dia.
- 5	5/32
- 6	3/16
- 8	1/4

NOSE PIECES


FLUSH TYPE NOSE

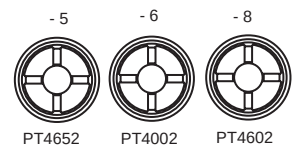


PROTRUDING TYPE NOSE

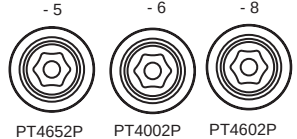

MILLABLE TYPE NOSE

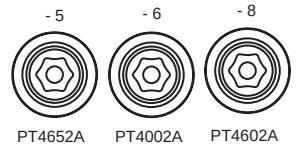

REDUCED FLUSH TYPE NOSE

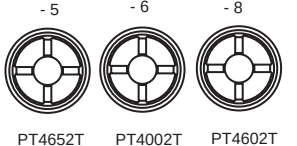

MASTER TORQUE DRIVERS ASSY & SIZE

